

# CHLOE STAND INSTALLATION INSTRUCTIONS FOR THE CHLOE POCKET LOOM

MIRRIX LOOMS



THE AUTHOR'S NAME

# YOUR STAND COMES WITH:

- Two hex nuts
- Two flat washers
- Two black bumpers on backing
- One forked leg

*You will need to install the stand before warping your loom.*

Remove one beam off of your loom. Or, if you are starting with a loom that is not yet assembled, begin with these instructions first.


With the nuts and washer in this kit, screw a hex nut onto the threaded rod to about the center of the rod. Place the two washers on the rod up to the nut. Screw the other hex nut onto the threaded rod. There should be about a ½” space between the nuts and washers.



# LOOM ASSEMBLY

Put the beam of the loom back on. If you are assembling this for the first time, refer to the Chloe Loom assembly instructions for detailed instructions on how to do this or <https://mirrixlooms.com/pages/set-up-and-warping-instructions>

After your loom is assembled, clean and dry the bottom beam. Remove the black bumpers from the backing and place each one on the bottom of the bottom beam centered and close to the outside edge. Press firmly down for one minute.

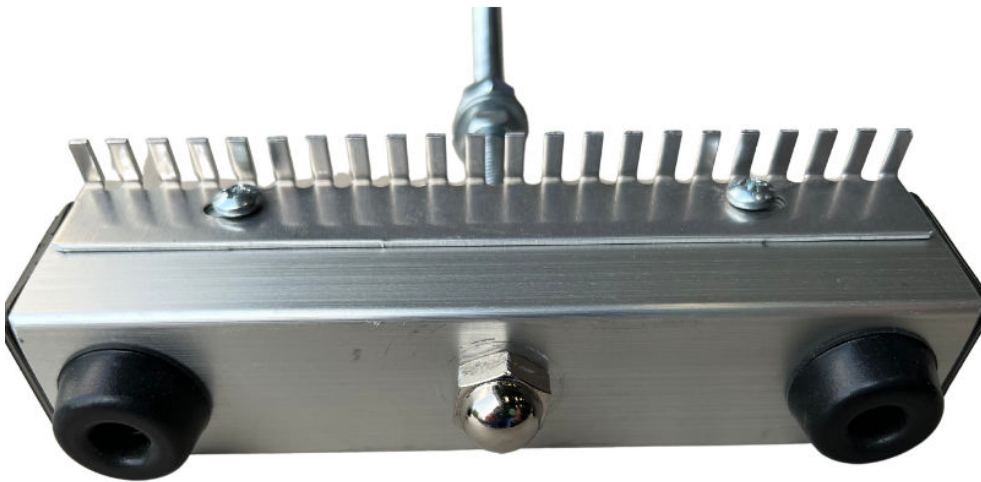

Place the forked leg between the flat washers in the center of the rod. Screw the top nut down onto the leg. This will hold the leg at an angle. To adjust the angle of your loom, loosen the nuts to the desired height and retighten the nuts. Using wrenches to tighten the nuts is advised.

